


AR35.20-B-0310-03A.fm

Montar el satélite exterior

ESD TRASERO 746.884, 746.885, 746.886, 746.887, 746.888, 746.889, 746.890, 746.891, 746.892, 746.893, 746.894, 746.895, 746.896, 746.897, 746.898, 746.899, 746.900, 746.901, 746.902, 746.903, 746.904, 746.905, 746.906, 746.907, 746.908, 746.909, 746.910, 746.911, 746.912, 746.913, 746.914, 746.915, 746.916, 746.917, 746.918, 746.919, 746.920, 746.921, 746.922, 746.923, 746.924, 746.925, 746.926, 746.927, 746.928, 746.929, 746.930, 746.931, 746.932, 746.933, 746.934, 746.935, 746.936, 746.937, 746.938, 746.939, 746.940, 746.941, 746.942, 746.943, 746.944, 746.945, 746.946, 746.947, 746.948, 746.949, 746.950, 746.951, 746.952, 746.953, 746.954, 746.955, 746.956, 746.957, 746.958, 746.959, 746.960, 746.961, 746.962, 746.963, 746.964, 746.965, 746.966, 746.967, 746.968, 746.969, 746.970, 746.971, 746.972, 746.973, 746.974, 746.975, 746.976, 746.977, 746.978, 746.979, 746.980, 746.981, 746.982, 746.983, 746.984, 746.985, 746.986, 746.987, 746.988, 746.989, 746.990, 746.991, 746.992, 746.993, 746.994, 746.995, 746.996, 746.997, 746.998, 746.999

- 1 Montar el cubo de traba (5) en la rueda anular (6) y montar el anillo de seguridad (4), o el anillo de seguridad de alambre (4A), en el cubo de traba (5).

**i** Existen dos tipos de anillos de seguridad: Uno del tipo SEEGER (4) y otro de alambre (4A).

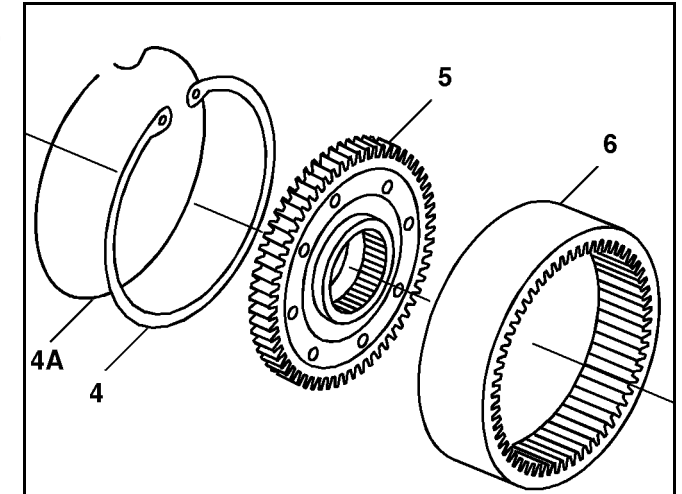

B35.20-0009-01